







LOBERON




COMING HOME

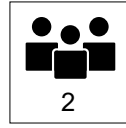


 A x 1	 B x 1	 C x 1	 D x 1	 E x 1
 F x 1	 G x 12	 H x 16	 100mm X 8mm I x 4	 38mm X 8mm J x 2
 65mm X 8mm K x 6	 L x 12	 M x 1	 N x 2	

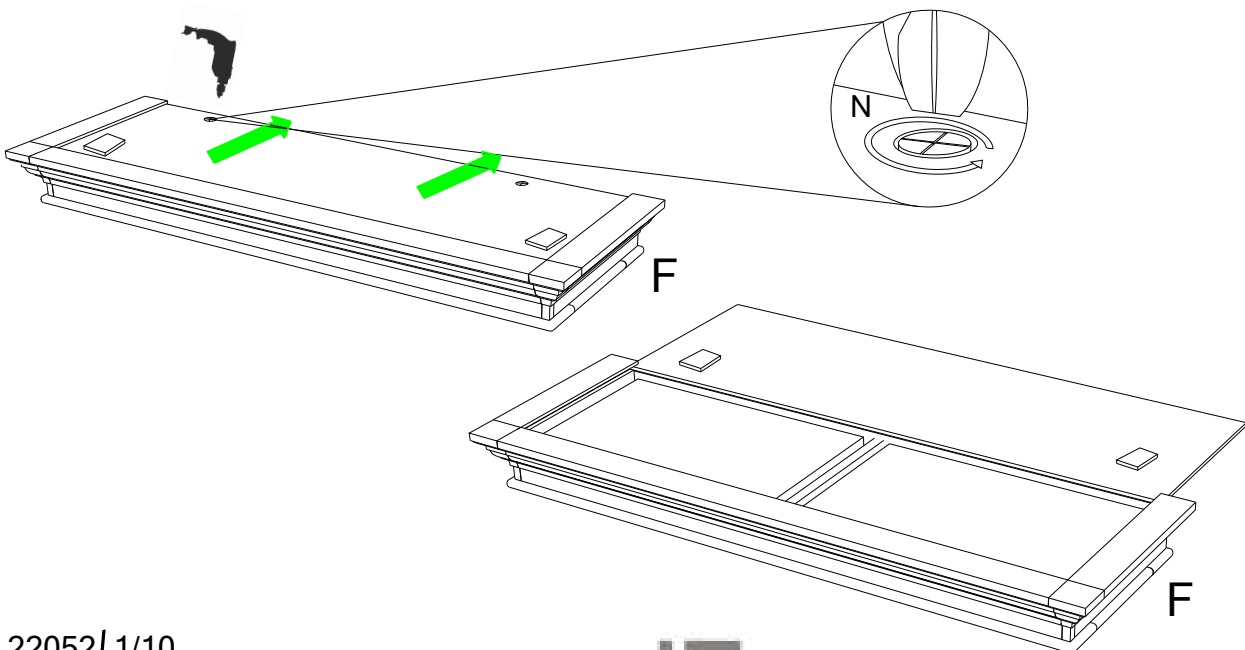

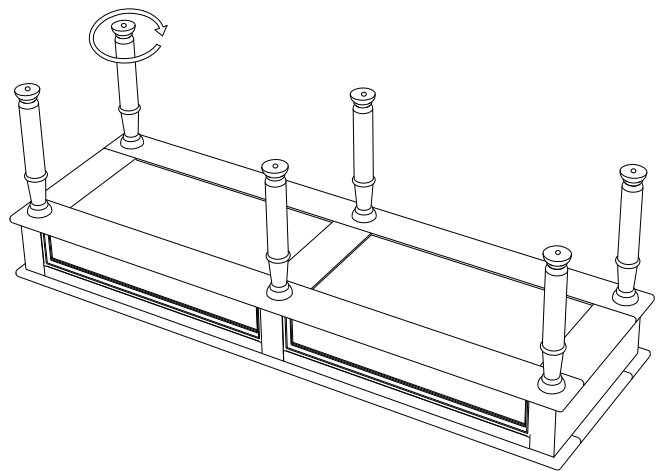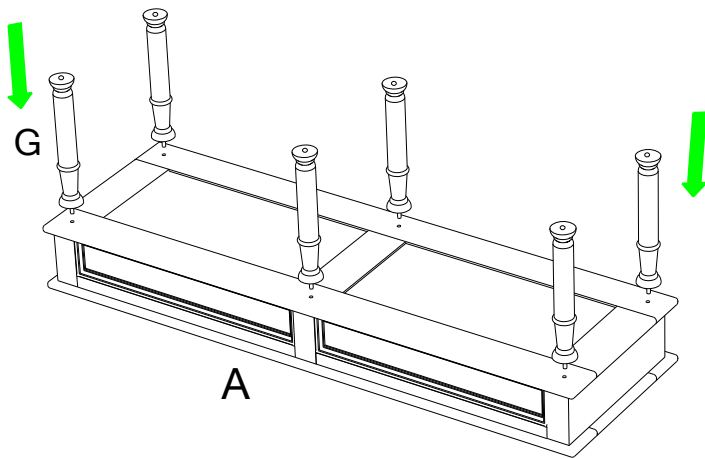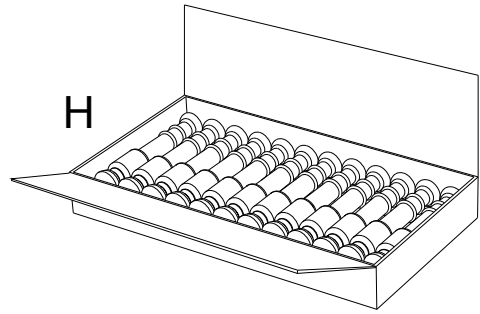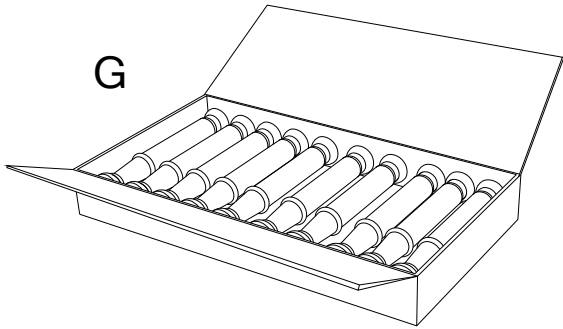


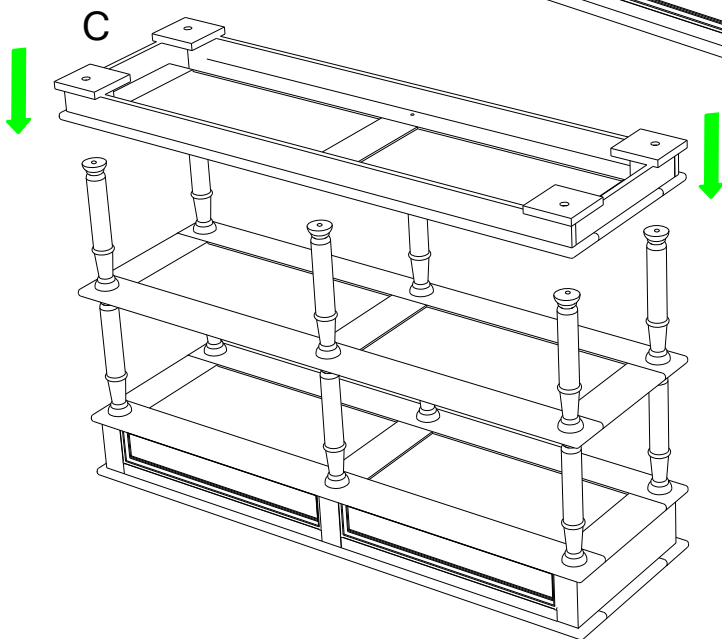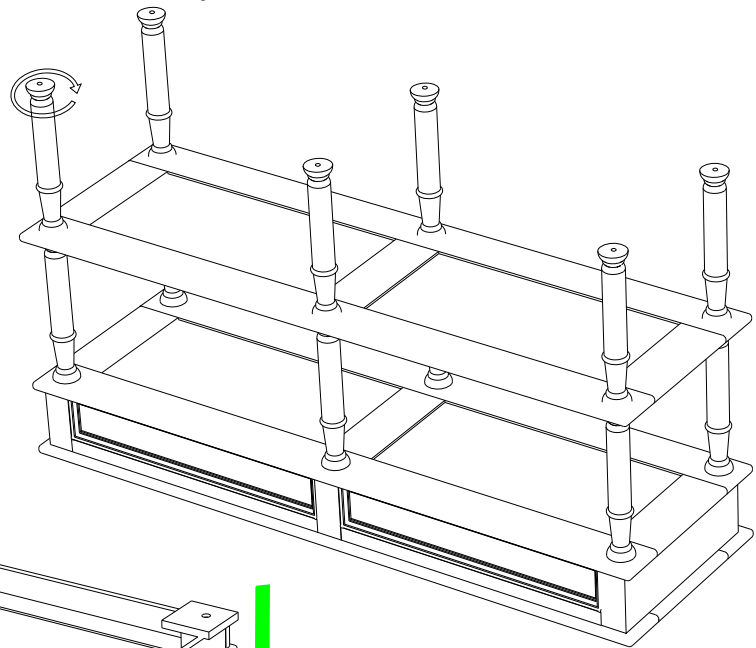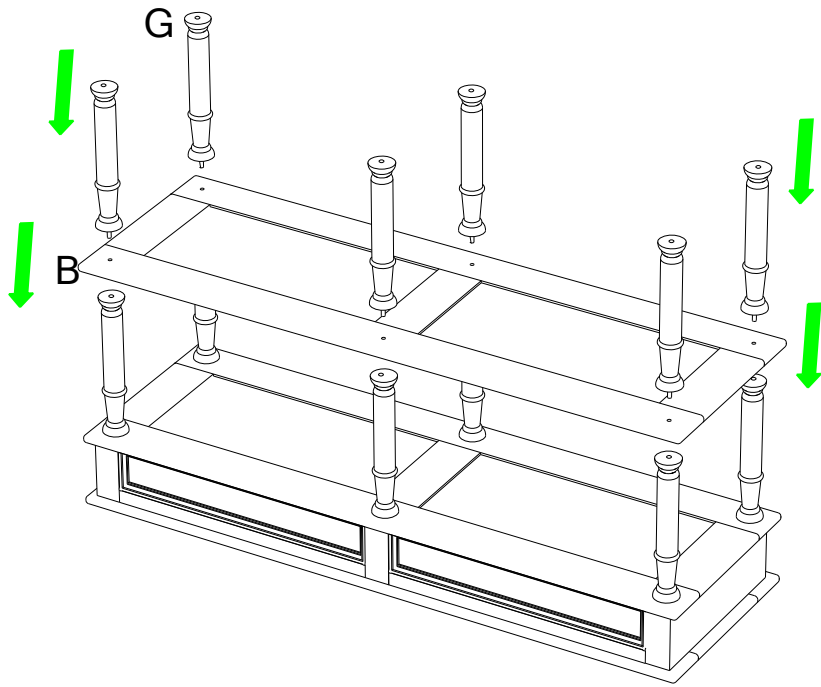

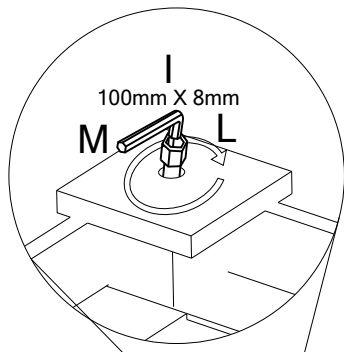


I
100mm X 8mm

M

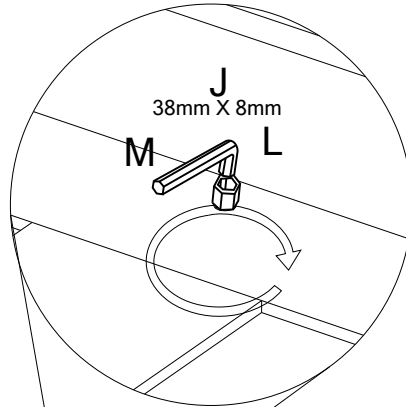




J
38mm X 8mm



M


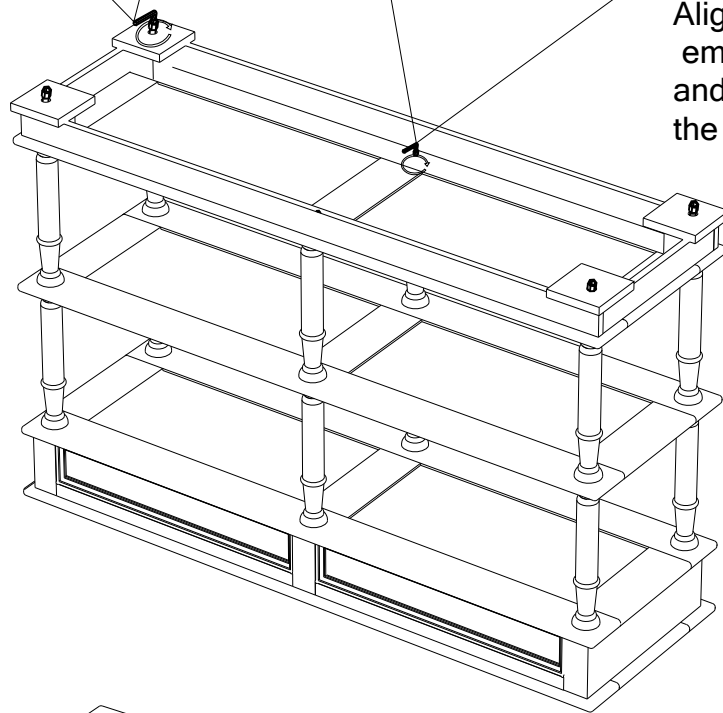





Align the bolts to
embedded nuts
and tighten with
the help of allenkey

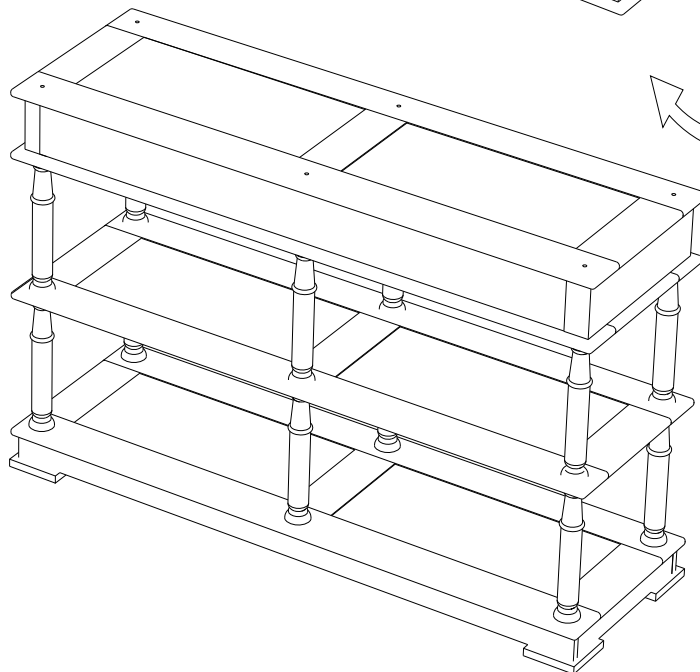


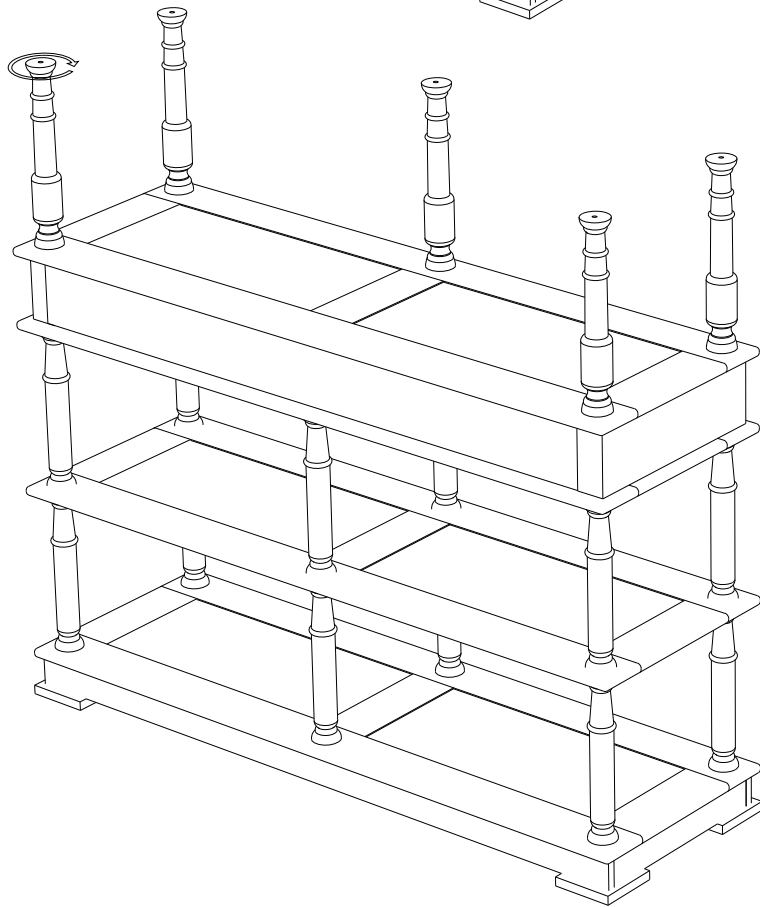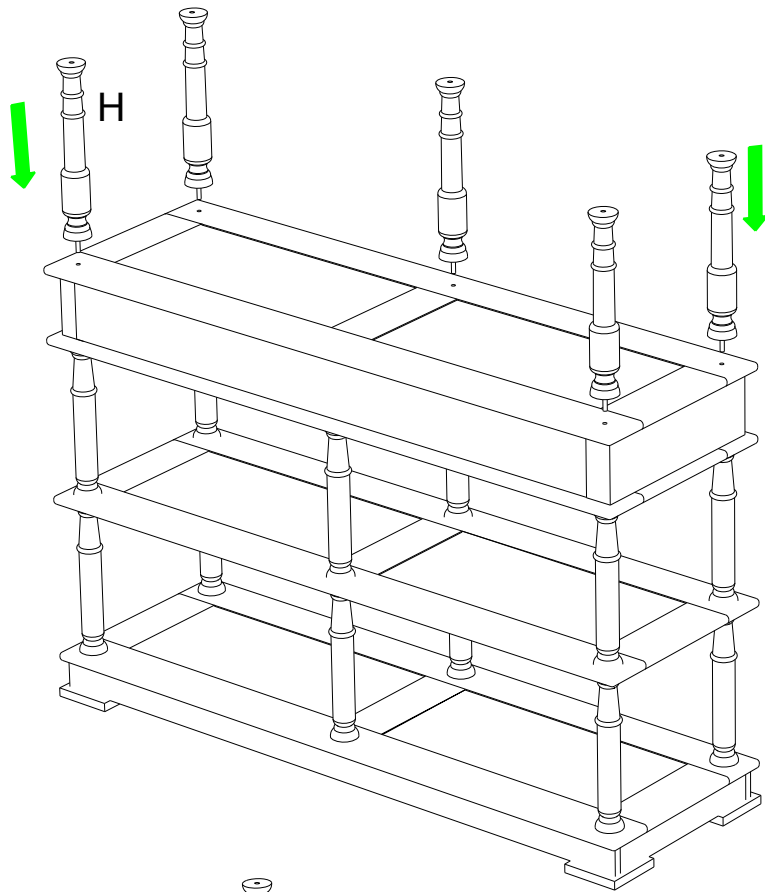


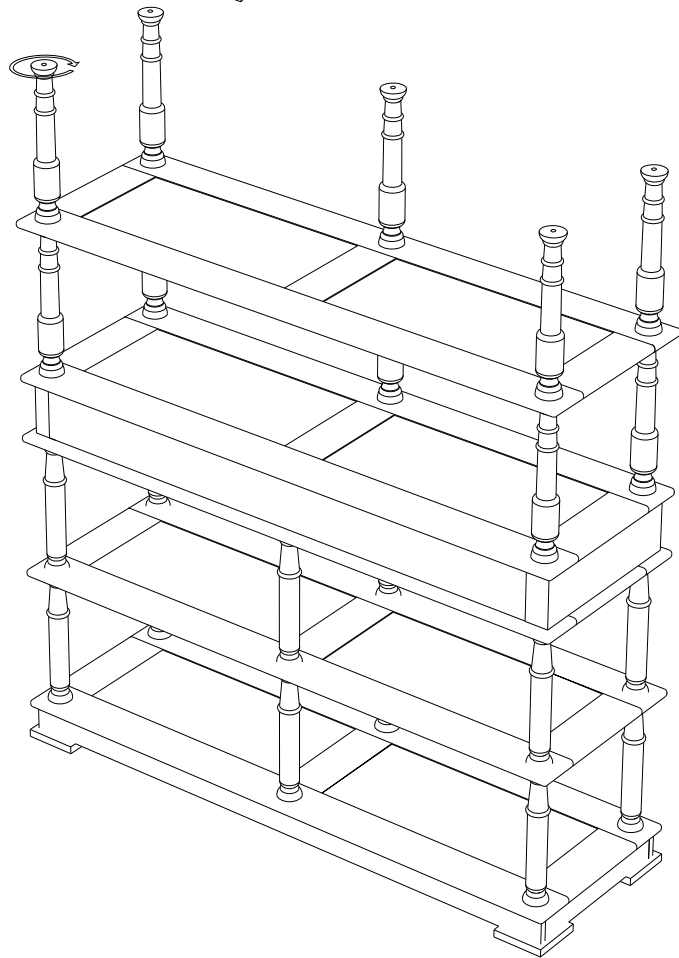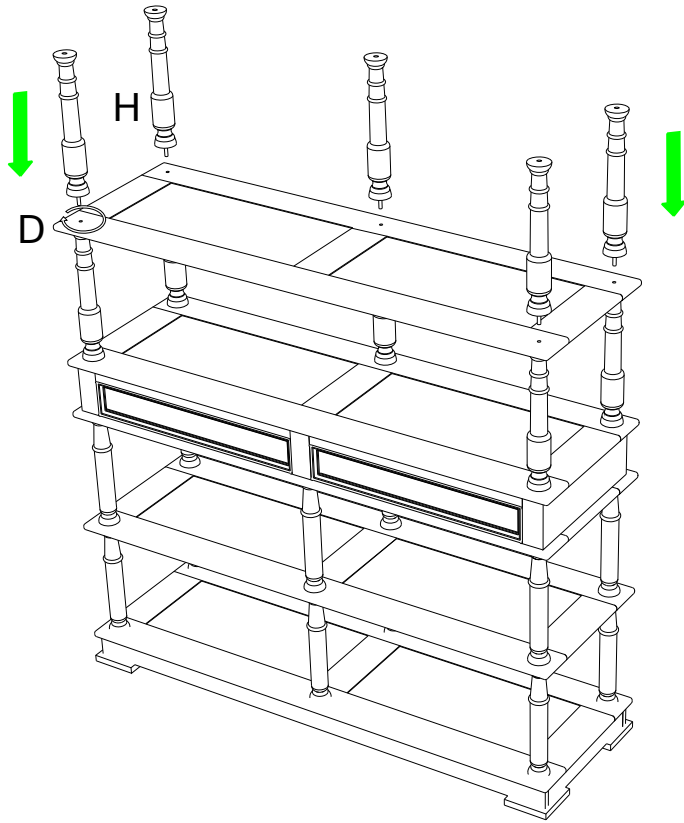

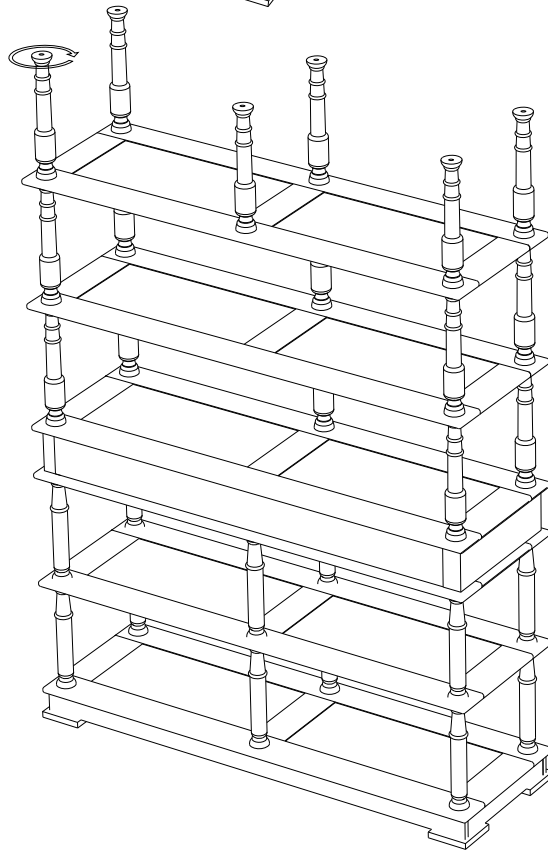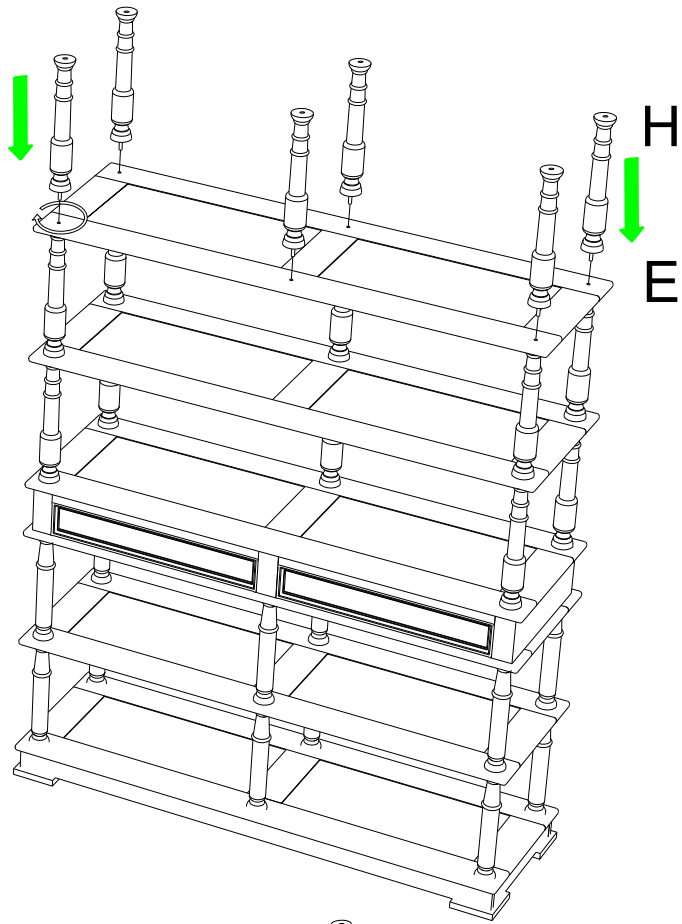

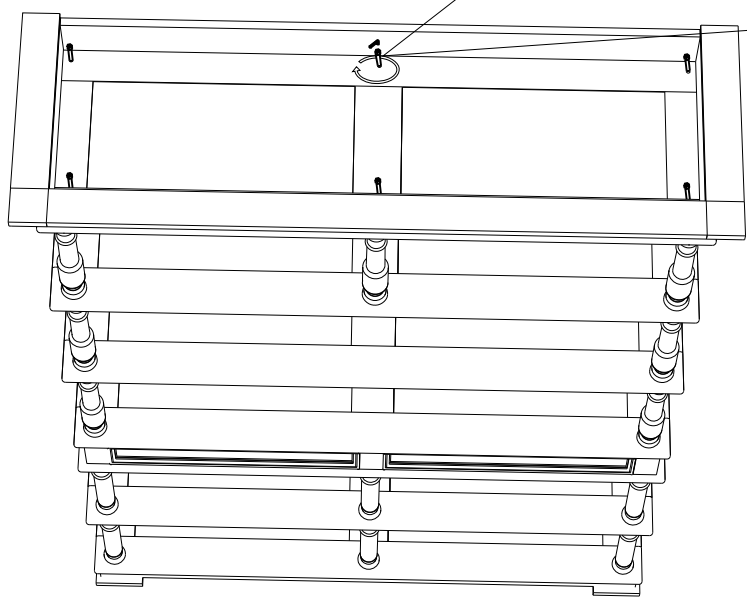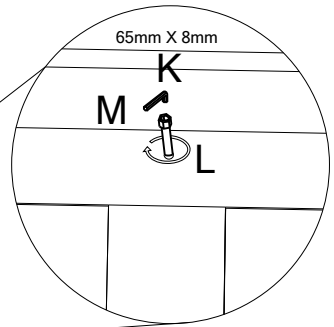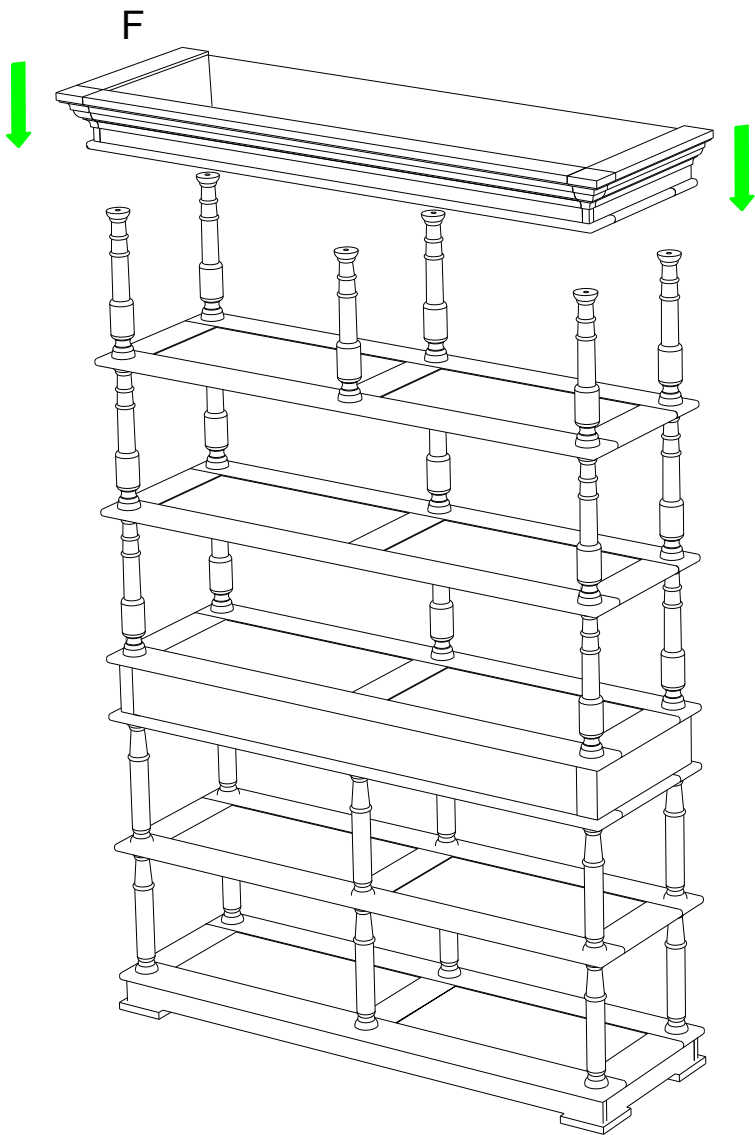

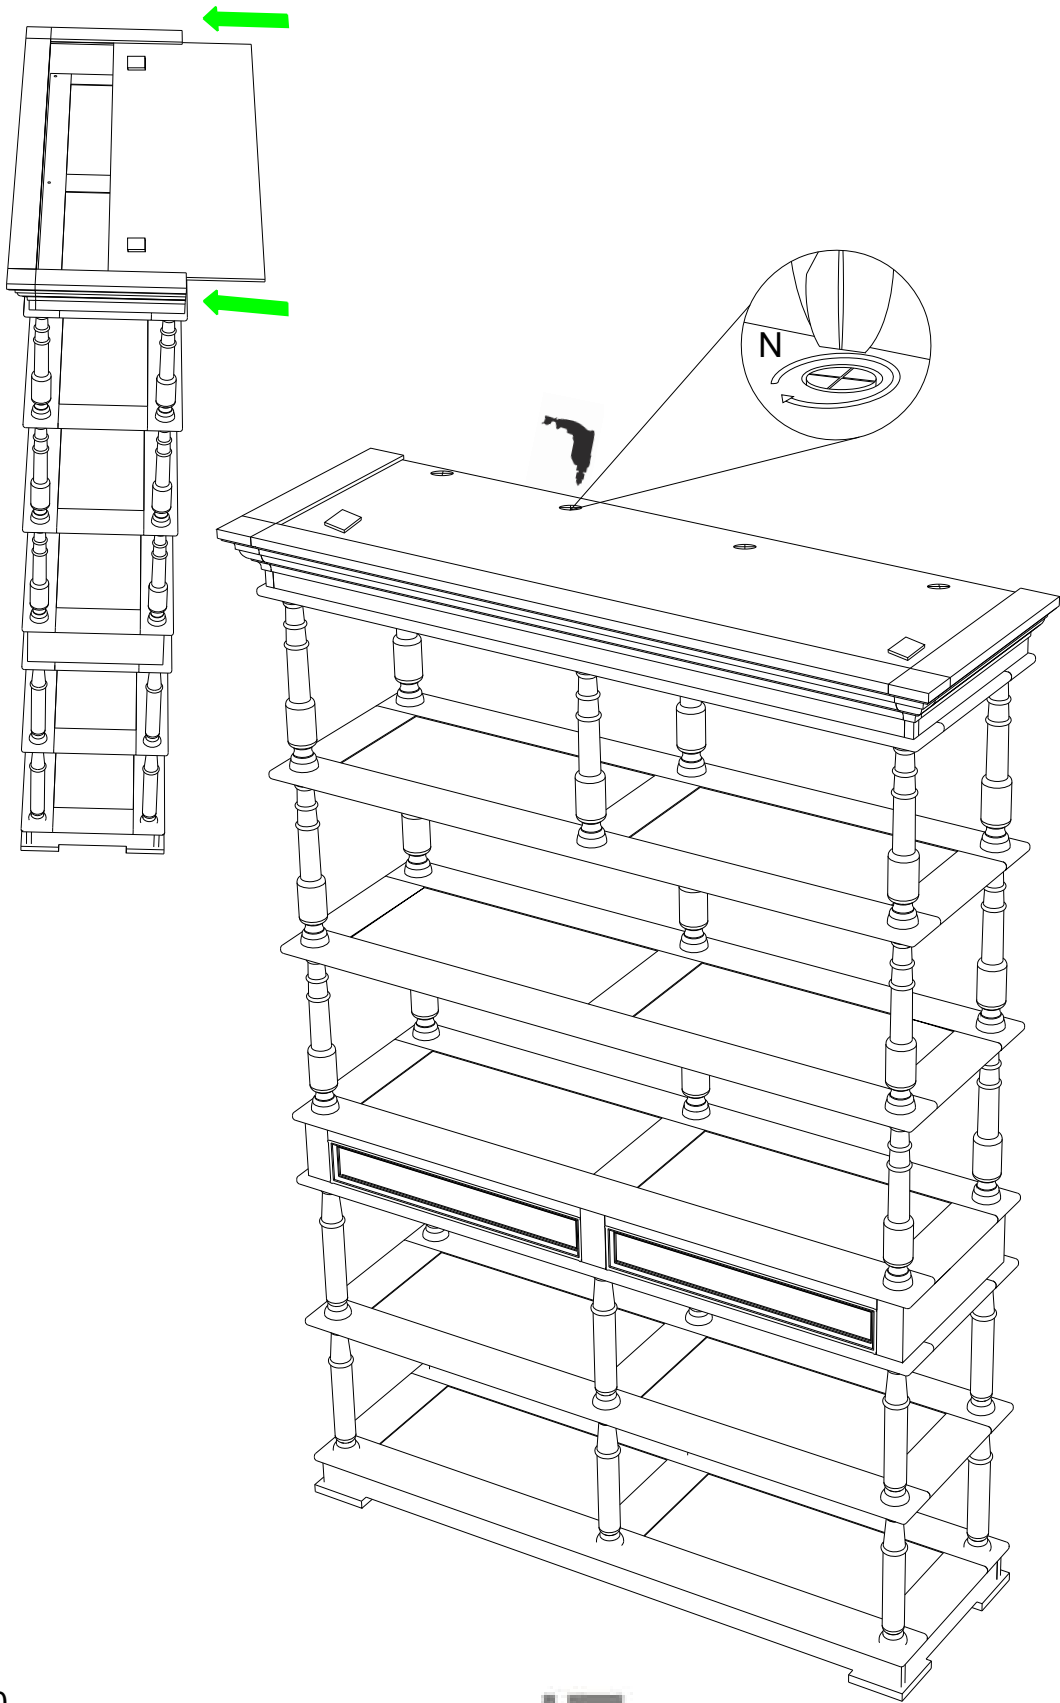

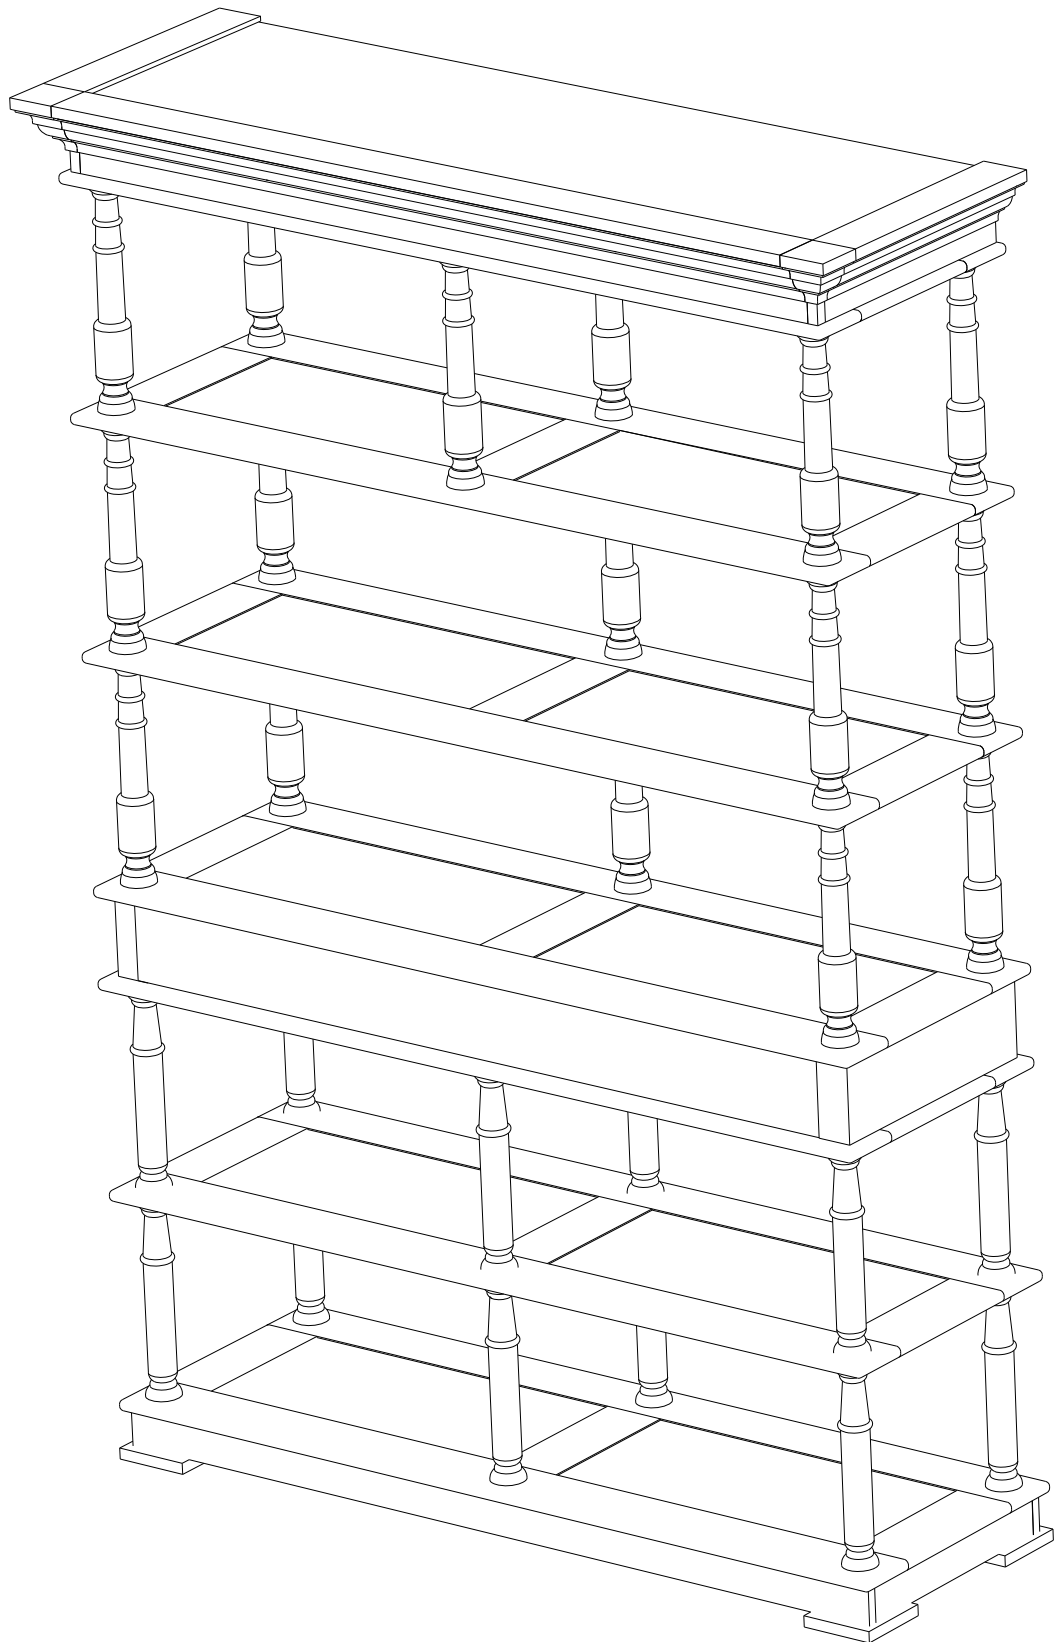

22052/10/10



